Petrol Management Systems

System Tool

Communication Test:


Communication Test is to check the connection between Reader & PC

Connect the reader to the PC via USB & Click on Read ID.If Reader is communicating it will show reader ID that you can modified (Not necessary) otherwise it will give Error of Reading ID



Initialize:

Initialize will clear all data from the Reader (Reader will be Reset)

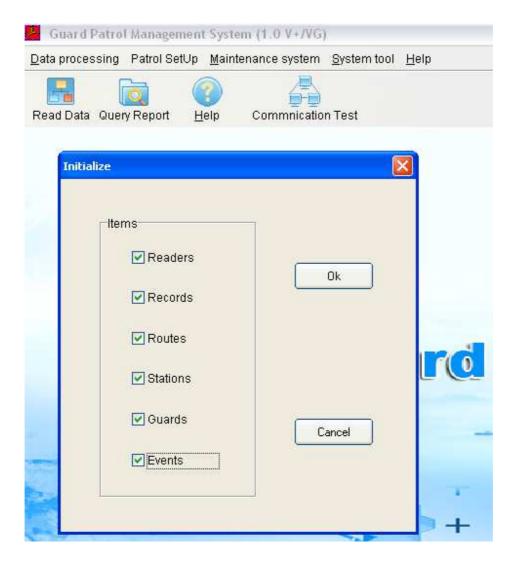


When the system is operated for the first time, or a reader is used on the system for the first time, it is recommended using it, in order to eliminate all useless records.

Petrol Setup

Setup Route:


In this you can setup the Route Number & Route Name

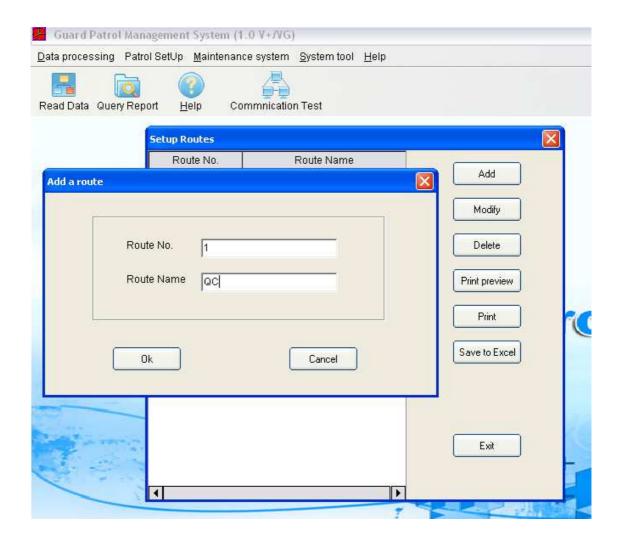

Setup Guard:

In this you can set the Batch for Each Guard For this first clear all the back from the reader By clicking on Batch Read then Select All & Delete (While clicking on Batch read Clear data has to selected)

Then Show the Batch & Click on batch Read & then write down the Guard Name then click Batch Add (That batch will come on Right Hand Side)

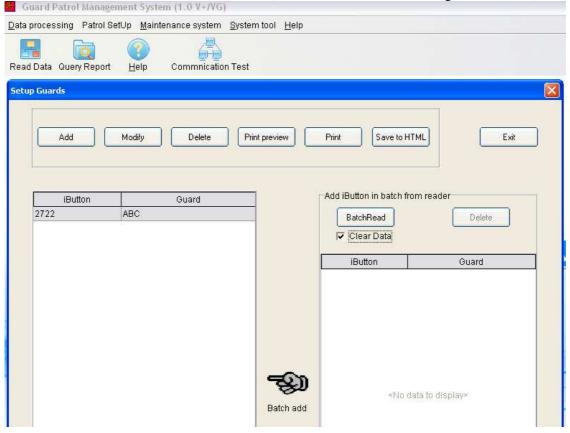


Setup Station:

In this you can set the Batches for each Station (You can say Gate)

How to Do

Show station Tag then read the Batch & write Down the Station Name here as well as on the Batch to Identify then click on Batch Add

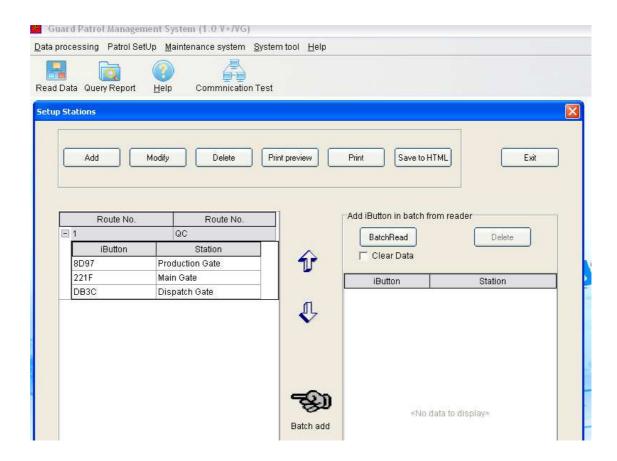


Read Data

Read Data:

Read Data will download the Transaction Data From the Reader. Once you Read the Data, you should Save it otherwise it will not be store in the Database & Data will be lost

Note: Once You Read the Data the data will get cleared from the reader so it is mandatory to save the Data

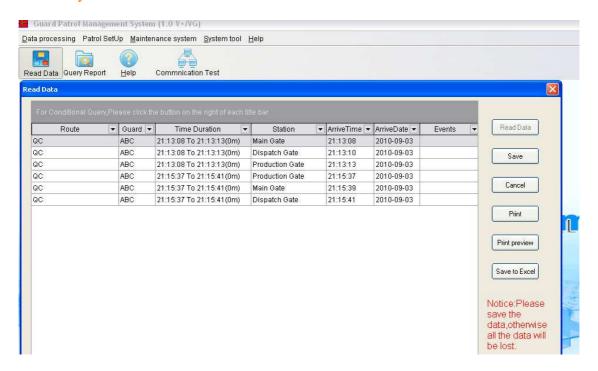

Query Report:

This menu is to view the data periodically

